

APLICOM A9 PRO QUICK

Quick installation guide rev. 1.0.0

Package content



Figure 1.

Includes

A9 PRO QUICK Unit (D108310) with Cigarette lighter cable for A9 PRO QUICK.

SIM card is also needed. Order card from teleoperator or from Aplicom.

Preparation of the A9 PRO QUICK unit

The following steps must be made in right order to start the unit immediately for full operation.

1. Open the unit
2. Install SIM card
3. Connect internal battery connection
4. Close the unit
5. Connect cigarette connector to cigarette power outlet
6. Download your configuration to the unit by using A9 TRIX data cable D337055 or USB cable D338100
7. Install the unit to carefully selected place

Insert the SIM card by opening the A9 PRO unit. Press locking lid on the other end of the device and at the same time lift up cover on locking side. Finally remove entire cover carefully and insert the SIM. See figures 2, 3 and 4.

NOTE! The SIM card must be installed before the internal battery is connected.

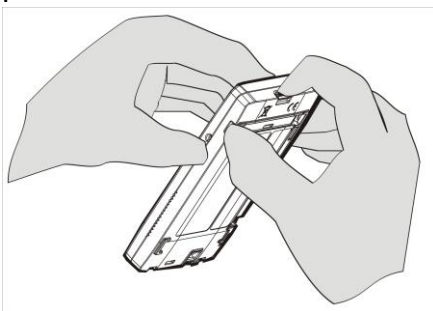


Figure 2

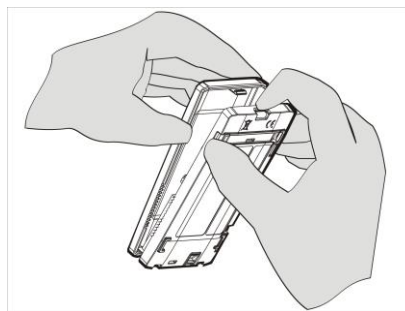


Figure 3

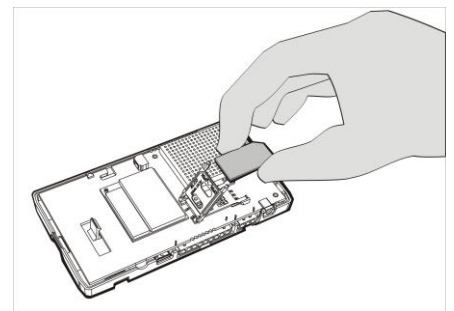


Figure 4

Connect internal battery as shown in figure 5.

The cigarette lighter cable has to be installed between top and bottom part so that flatten part of the cable gland, shown in Figure 6, is facing down. Push cover on it's place and ensure that cable gland sits properly as shown in Figure 7 and 8. If needed use the cable tie to ensure that the housing stays properly closed, shown in Figure 10.

NOTE! If you have a newer cable collar which sit tight on bottom part then the cable tie is not needed.



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9

SW conf / COM 3PAD



Figure 10

For more information, see document *D521000 A9 PRO Installation Guide*.